

Please read these instructions in conjunction with the pictures on the more information page of the coach you have bought. There are some very clear pictures there showing close up detail.

Please use these additional instructions in conjunction with the standard coach instructions.

**Step 1.**

Make sure you make a left and right hand pannel ! then scrape away the centre bar with a scalpel.



Fig 1.a

**Step 2.**

File the lower two corners square



Fig 2.a



Fig 2.b

**Step 3.**

With very coarse, (40 grit) sandpaper, rough up the lower panel and along the top of the window under the top bar.



Fig 3.a

**Step 4.**

Apply glue onto the back of the duckett and clamp into place.

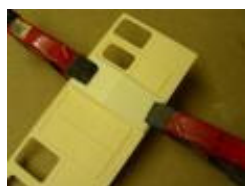


Fig 4.a

### **Step 5.**

Sand, scrape or file the sides of the partition until it's a snug fit in the coach. Position just behind the windows and run glue down the inside corners.



Fig 5.a



Fig 5.b

If you have trouble with the building of this kit, please do not hesitate to contact me. Also if you are not happy with the quality of a casting, I will be happy to replace it free of charge on receipt of the supplied kit item. Please do not forget to keep an eye on my website, as my range is growing fast.